




CLASSIC TIRE

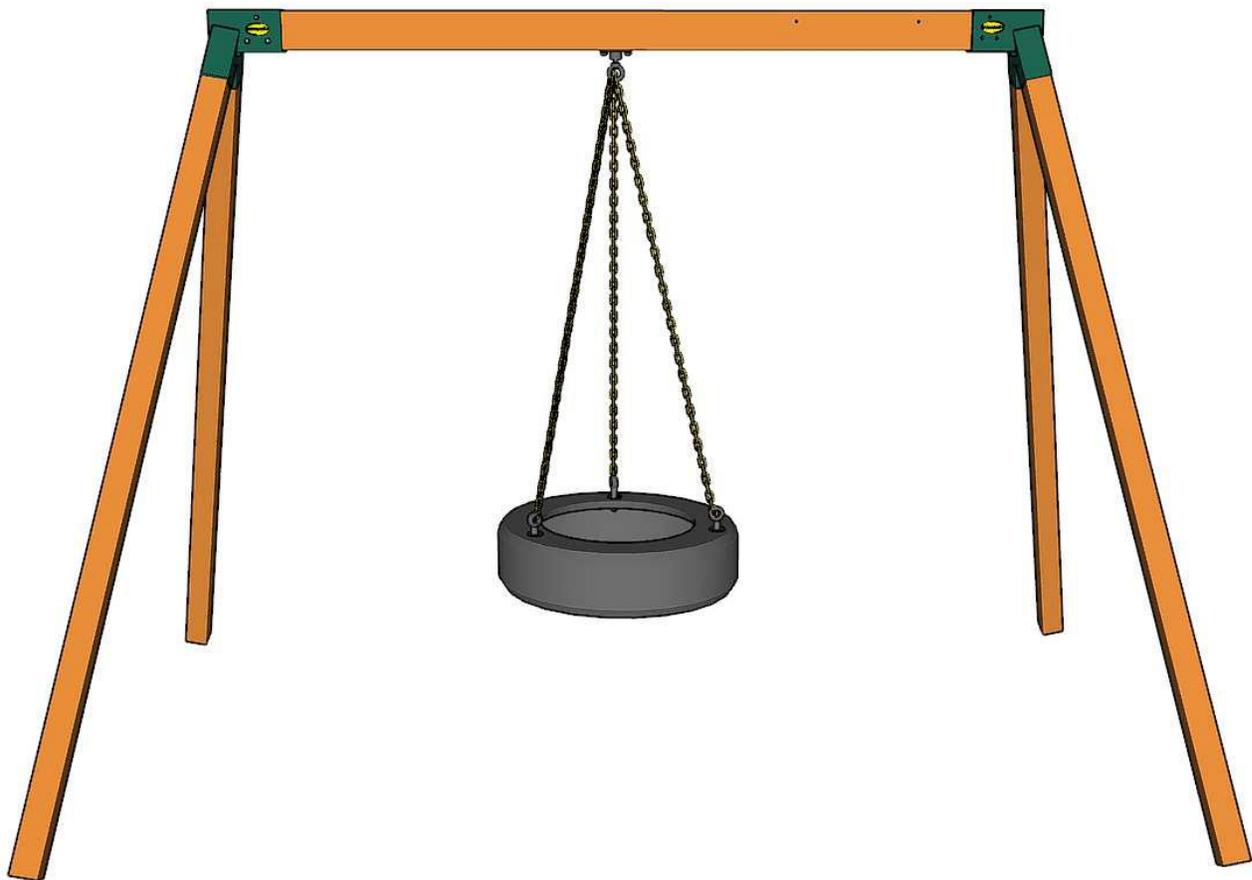

Owners & Instruction Manual

This instruction booklet is to be used exclusively for Eastern Jungle Gym customers only. It is not to be handed out to the general public. Any duplication of this booklet will be subject to copyright protection and federal laws.




IMPORTANT INFORMATION PLEASE READ...

It is important for you to go through your boxes and check all material, hardware and wood prior to assembly. Please familiarize yourself with the material. It is very helpful to read and review this instruction booklet. This will help ensure you assemble your Jungle Gym properly, safely and more efficiently. **A little time now can save you time when your assembling!**

If you have any missing parts, damaged material, or have any questions installing your new Eastern Jungle Gym product. Please call Eastern Jungle Gym directly.

**Customer Service available 9-5pm EST Mon-Fri call 1-800-752-9787
or Email-Info@easternjunglegym.com**

Do not contact or go to the retailer you purchased your new Eastern Jungle Gym from.





Play Safely Instructions

- 1) Do **NOT** let children play on your Eastern Jungle Gym product until it is fully and safely assembled.
- 2) Review all safety points with children prior to letting them play.
- 3) Adult supervision is recommended for children of all ages.
- 4) Warn children from playing, walking or running in front of or behind any moving objects.
- 5) Warn children from twisting on the swings this can weaken product and could result in damage.
- 6) Do **NOT** to attach any objects to the Swing Set such as clothes lines, jump ropes or any other rope as this may cause strangulation hazards.
- 7) Warn children from pushing empty swing equipment, twisting chain or ropes or jumping off any moving swing equipment or deck. DO NOT use any part of the swing set in a manner that it is not intended for.
- 8) Warn children from playing on swing set if it is wet this can cause parts of swing set to become slippery.
- 9) Warn children only one person on a swing at a time. (except Glider)
- 10) Warn children that anything other than sitting on swings is dangerous and can cause serious injury. Never stand or kneel on swings.
- 11) Warn children to not loop chains over any object this may cause the chain to weaken.
- 12) Children should not wear any loose clothing while playing such as scarfs and hats with strings or any other very baggy clothes. This can create hazzards.

Choosing a Location to Assemble your Eastern Jungle Gym

When selecting a your Eastern Jungle Gym location site keep in mind the child's safety. Here are some recommendations to help you create a safe play area.

- 1) The swing set should be located on fairly level ground. The stationary components such as ladders, rock walls and slides are recommended to be a minimum of 6 feet from any obstruction such as buildings, trees, rock wall, clotheslines, fences and overhead branches. Any swinging equipment is also recommended to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well.
- 2) Do not locate Jungle Gym on asphalt, concrete, packed earth or other hard surfaces.

Now that you have located a safe area to build your Jungle Gym you are ready to begin.






Site Location

Our exclusive leveling system was developed through more than 26 years of installation experience. This unique leveling system ensures safe installation on un-level properties.

While your jungle gym will be level and safe some of the activities will be affected by the sloping property (Diagram A). If your swing beam is installed downhill (or uphill), the swing position closest to the end will be lower to (or further from the ground) (Diagrams A).

To determine play area size, it is recommended that you add six feet to the jungle gym dimensions on all sides. However, besides swing beam side supports and other low traffic areas it is not critical to have a six foot “play area”. Installing a resilient surfacing under the jungle gym is always recommended and can be done AFTER your jungle gym is installed.

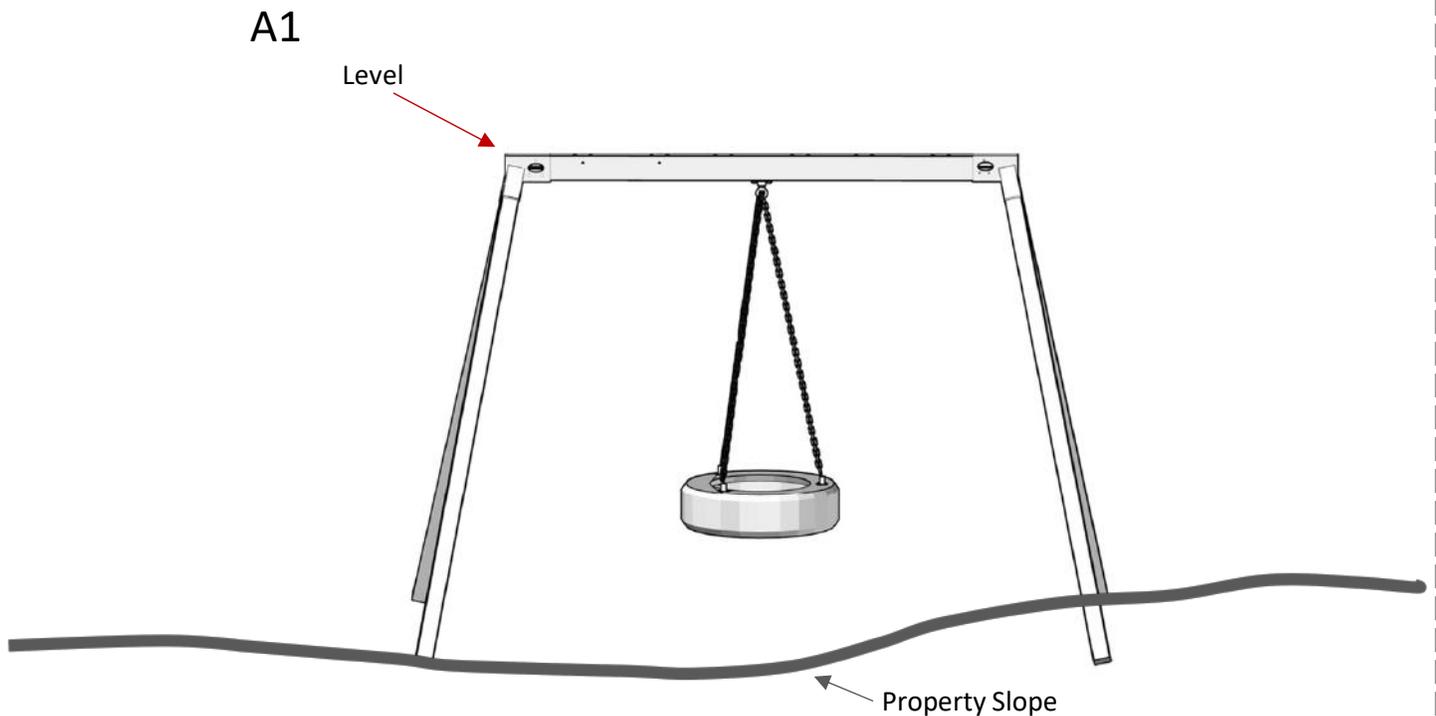



Tools Required

#2 Square Head Screwdriver and bit
Medium Phillips Head Screwdriver and bit
7/16" Standard Socket
1/2" Standard Socket
9/16 Standard Deep Well Socket
Standard Socket Wrench / Electric Impact Gun
Electric Drill
9/16" Box Wrench
1/4" Pilot Drill Bit
7/8" Countersink Drill Bit
Tape Measure
Carpenters Level
Claw Hammer
Razor Knife
Step Ladder
Safety Glasses

Assembly Safety Guidelines

- 1) Keep all children away from assembly area. Power tools and other dangerous equipment will be needed. Many parts are heavy and could seriously injure a child.
- 2) You're ready to start your assembly process. You will need at least two adults to safely and easily assemble your Eastern Jungle Gym.
- 3) Wear safety glasses when drilling out wood to protect your eyes from flying wood chips.
- 4) Make sure all lag bolts and nuts are tightened and secured completely.
- 5) After thoroughly reading all your information, and have located your swing set site. Carefully unpack all your parts. NOTE: keep check list close by. Remember that a little time familiarizing yourself with the parts and instructions before you begin will help you avoid mistakes and save time later.


Maintenance Instructions

Here are some maintenance tips that must be done to ensure safe play.

- 1) At the beginning of each play season look over swing set: check nut, bolts, screws and tighten as needed. Look over all components such as swing seats, slides, chains, ladders and wood components for deterioration or sharp edges and replace if necessary.
- 2) Oil all metal components such as swing hangers and tire swing hangers.
- 3) Spot sand any areas that are checking or splintering and check for broken parts and replace if necessary.
- 4) We recommend on a yearly basis coat your swing set with a sealant. You should look over set to make sure it does not need spot sand first. This will help preserve the natural beauty and characteristics of the wood. Be sure to use non toxic sealants.




Accessories Identification

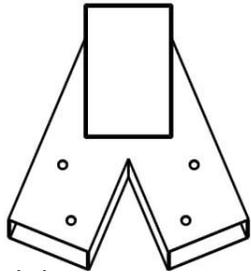

(2) Easy 1-2-3 Bracket




(3) Snap Hooks

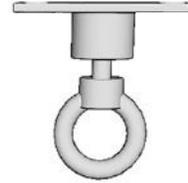

(1) Tire Swivel



(3) Chains w/eye hooks

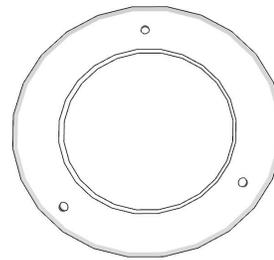

(1) Tire

Wood Identification

Classic Swing




1 @ SWING BEAM SBHG46120



2 @ SIDE SUPPORT PART # SSP44114



Hardware Identification

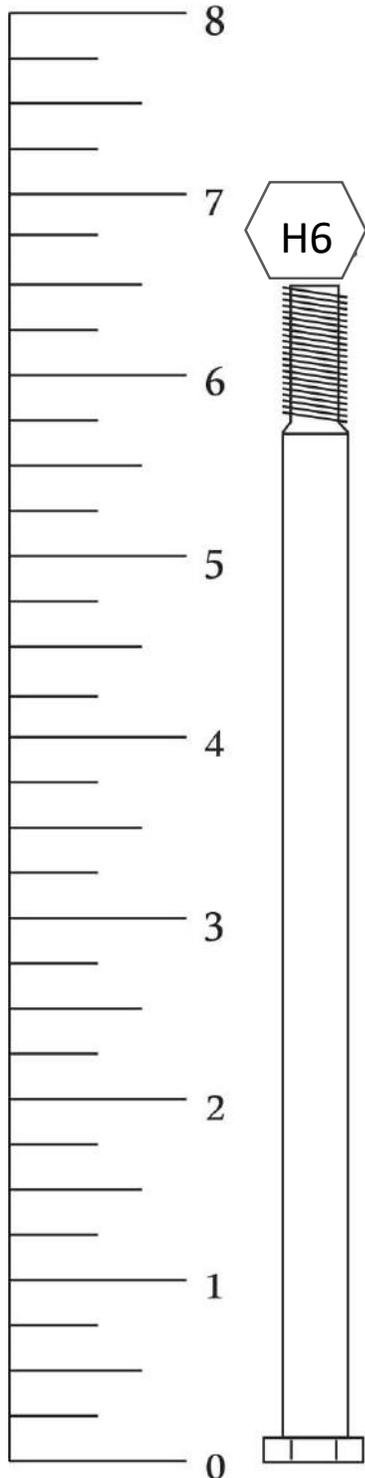


H6- 3/8" x 6 1/2" Hex Bolt

B3- 5/16" x 3" Lag Bolt

N- Nut

W 3/8" Washer

W 5/16" Washer

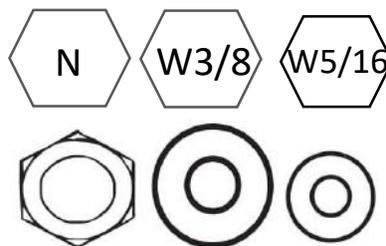



SPECIAL NOTE BEFORE BEGINNING YOUR ASSEMBLY:

All Recessed holes must be piloted with 1/4" drill bit to help minimize splintering.

All lag bolts must be accompanied with a washer before driving in lag bolt.




Now you are ready to begin assembling!


Note: If you have purchased only the Eastern Jungle Gym hardware kit, EJG recommends that the beam size should be 4x6x120". The side supports should be 4x4x96".

Please prepare the swing beam using the dimensions shown in the diagram below.

You will need a 1-3/8" x 8" Drill bit.

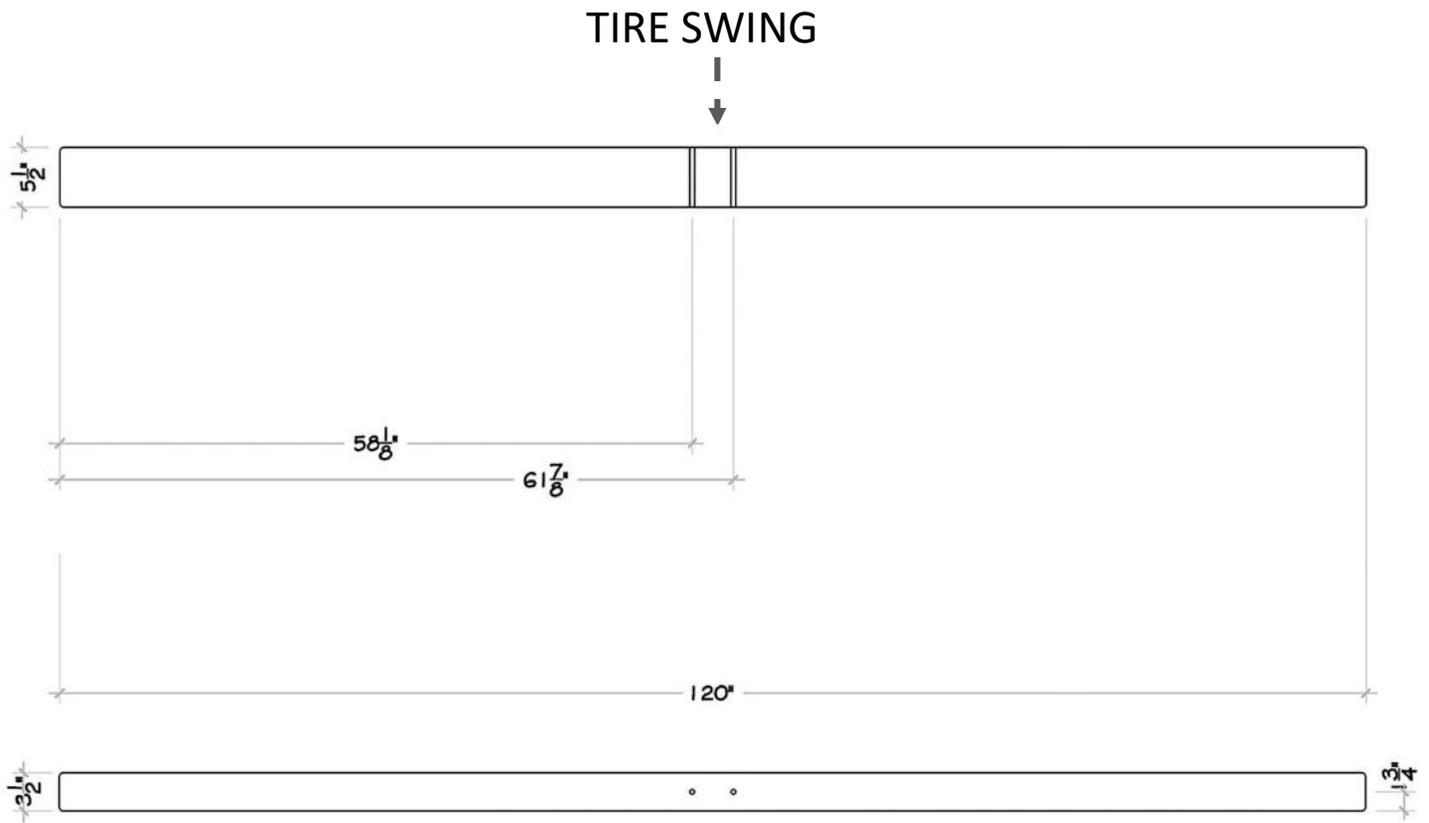


7/16" PILOT HOLE



Step #1 Swing Beam Assembly

Tire Swing


Place swing hangers on beam using hardware provided.

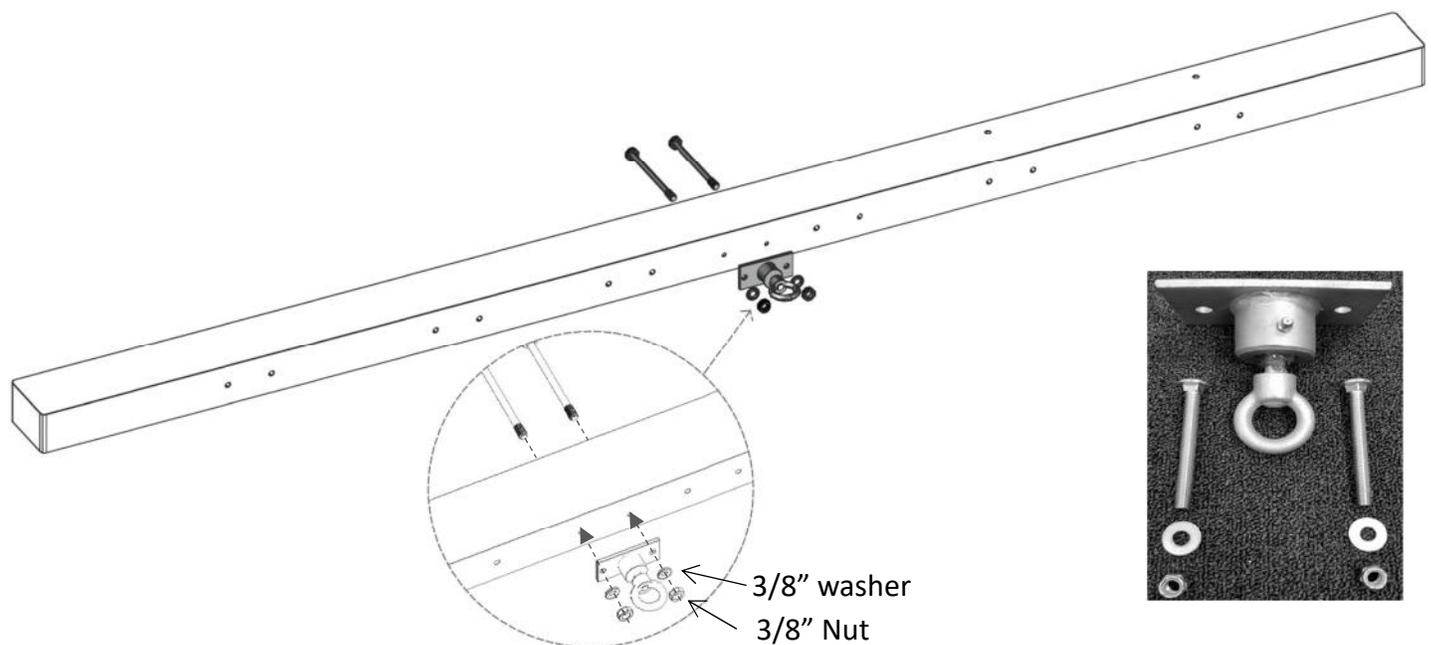

Step #2 Swing Beam Bracket

Tire Swing

Layout SBHG46120 on the ground with swing brackets facing up. Slide **Easy 1-2-3 Bracket** onto beam. Pre-drill (3)-1/4" pilot holes. Attach bracket to post using B3 lag bolts. Repeat on opposite sides.

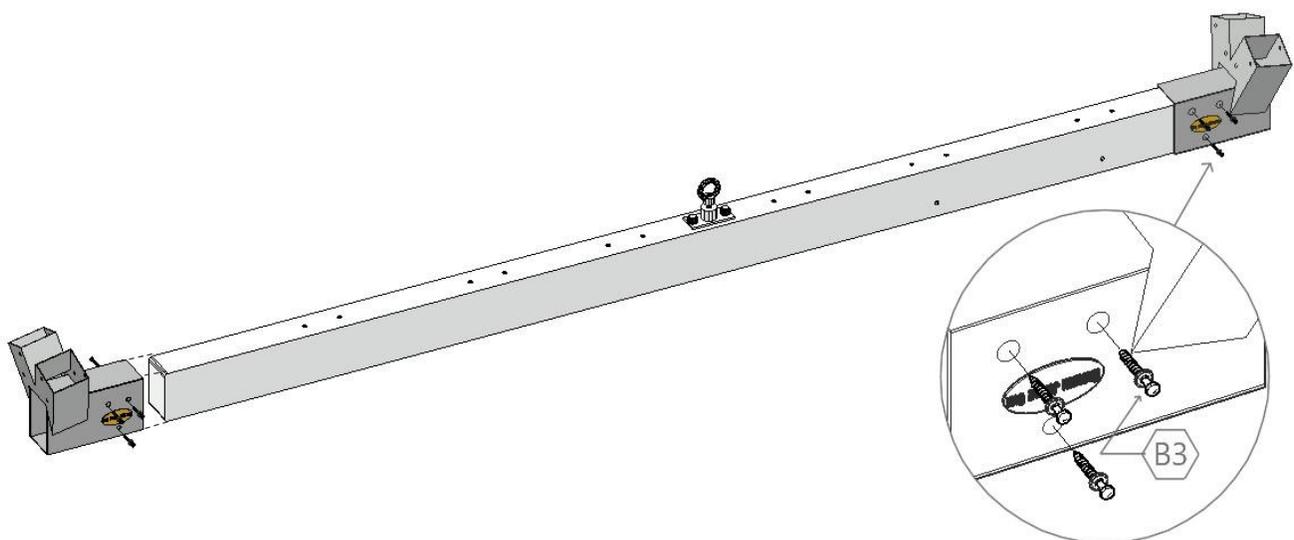

Note: Make sure swing hangers are facing up.

Step #3-Post Install

Classic

Install (2)-SS44114 Posts into **Easy 1-2-3 Bracket**. Predrill (4)-1/4" pilot holes.
Install posts to bracket using B3 bolts.




Step #4- Tire Swing Assembly

Classic Tire

The Rubber Tire Swing is pre-drilled on both sides. The top side has 3 small holes for the connection of the swing chains and the bottom side has 4 or more large holes for drainage of water, Please inspect your tire before connecting the eye hooks to ensure that they are installed on the correct side.


Top Side (CORRECT)

3 Pre-drilled holes small in size and evenly spaced

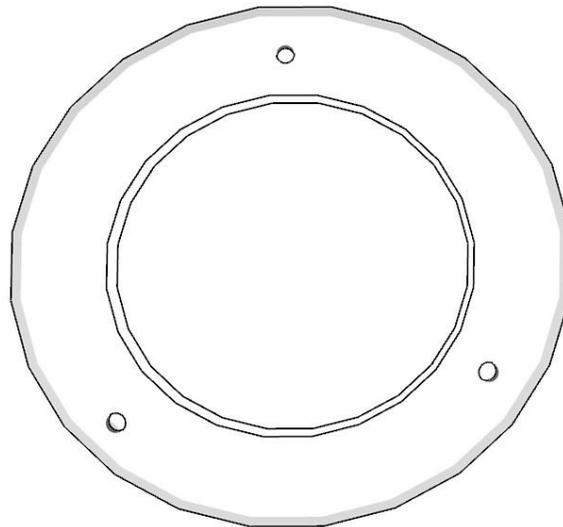

Bottom Side for drainage

4 or more pre-drilled holes that are larger in size and scattered.

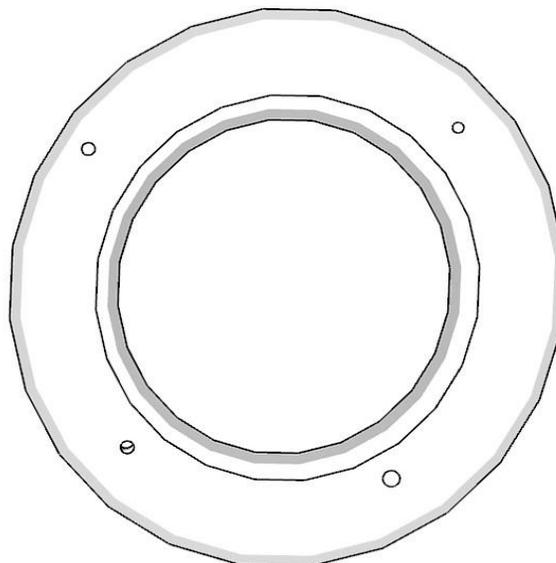

Step #5- Tire Swing Assembly


Classic Tire

Remove all parts from the box and place on the ground. Inspect the rubber tire and make sure that the side with 3 evenly spaced holes is facing up.

Remove plastic from the chains. Unscrew the lock nut from each of the swing chains and remove the metal washer. Place the tire eye bolts through the top of the tire, placing one eye bolt into each of the 3 pre-drilled holes.

The eye bolts will need to be secured from the inside of the tire secure it with the lock nut that was previously removed. Tighten the lock nut with a wrench until snug. Repeat this step for the remaining two eye bolts.

Your tire swing is now complete! Attach the tire swing to your backyard swing set using the hardware of your choice.

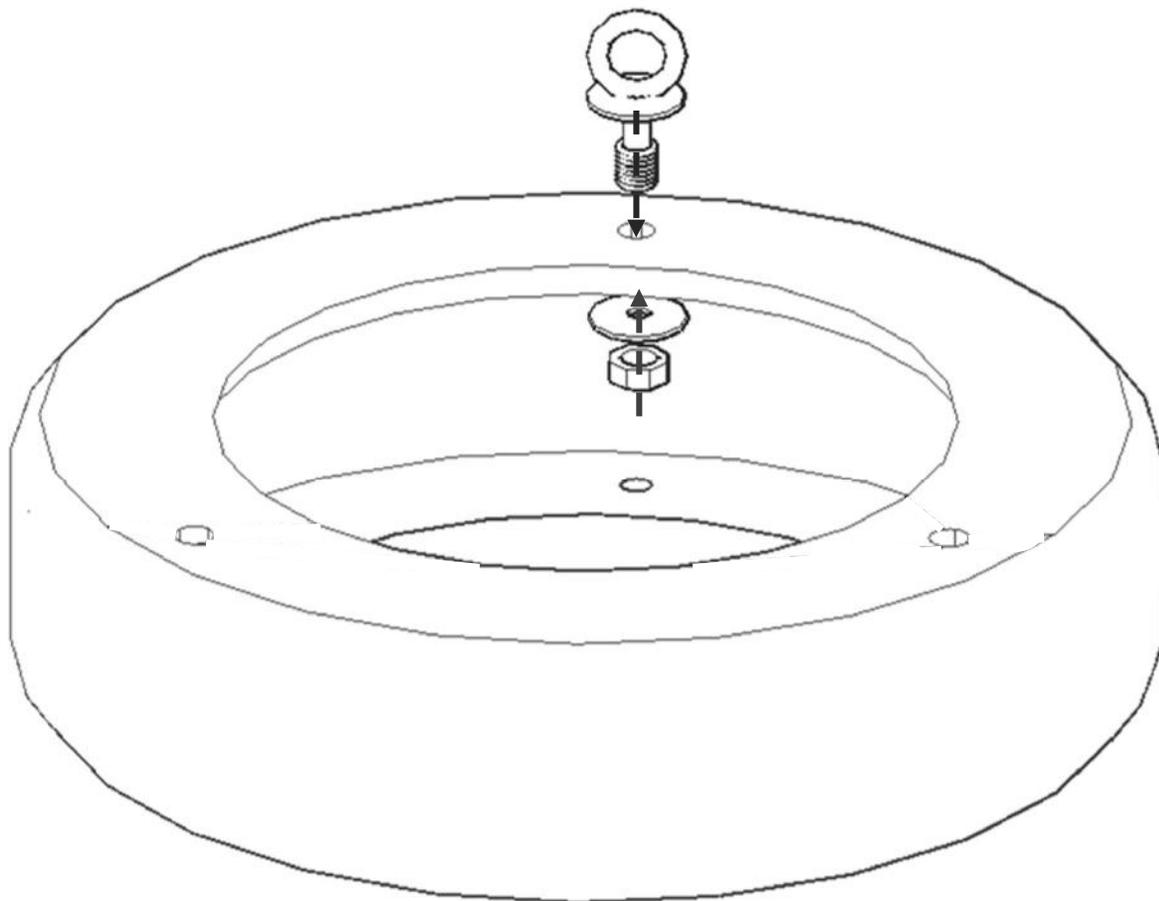


Step #6- Swing Beam Leveling

Classic Tire

With the help of another person turn swing beam assembly upright. Level swing beam as needed by digging the side support legs into the ground.

Check with level

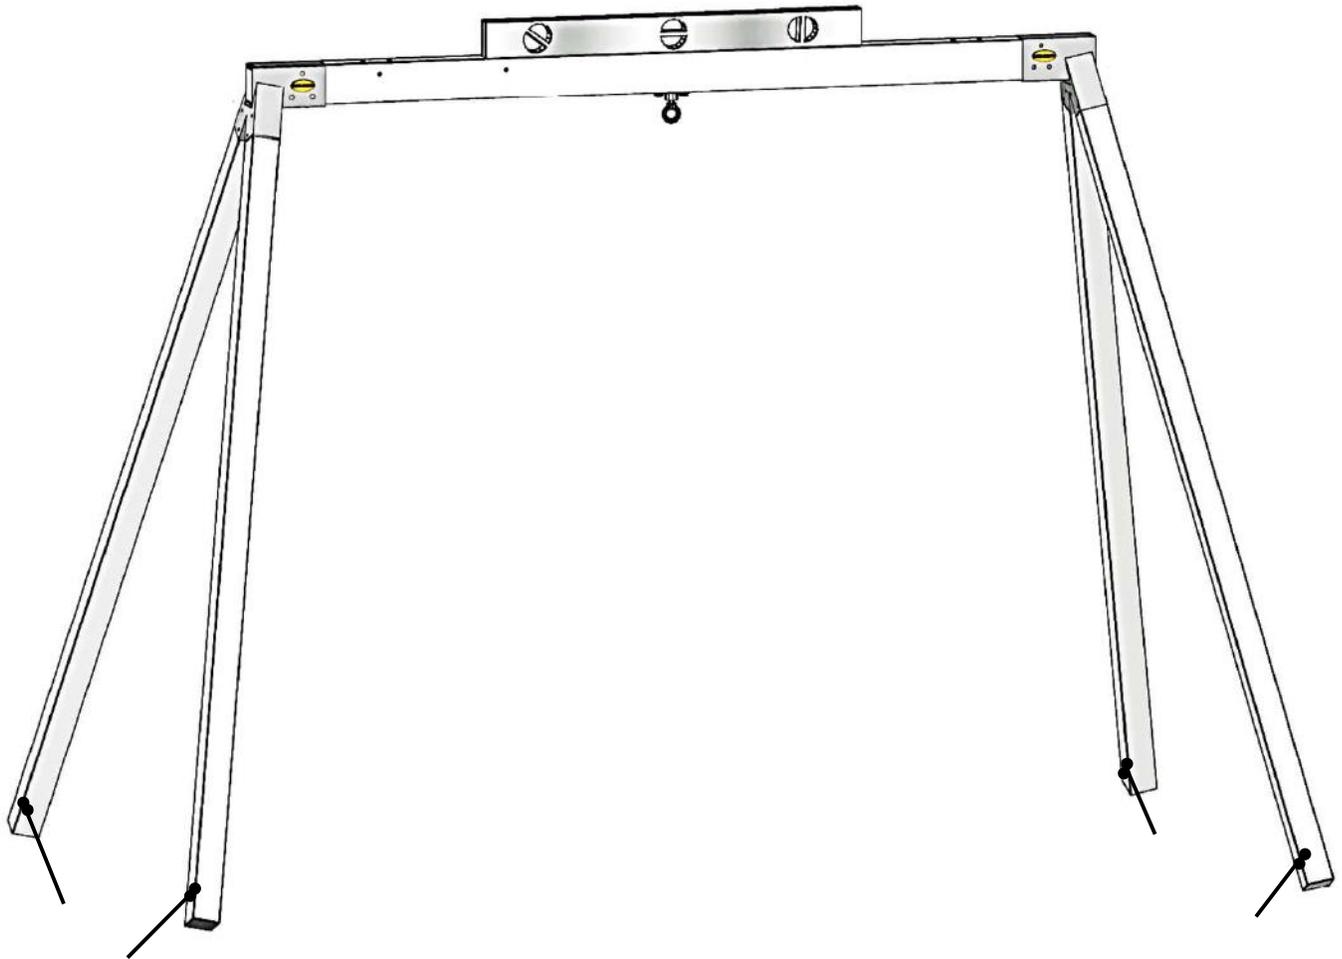


Four metal stakes are provided for added stability. After swing beam is installed insert stakes into the ground flush with support legs. Leave 6" exposed and bolt to support using two B3 lag bolts.

Step #7- Swing Beam Level

Tire

Hang swings and trapeze bar. Make sure chains are the same length on each piece to ensure the swing is level.

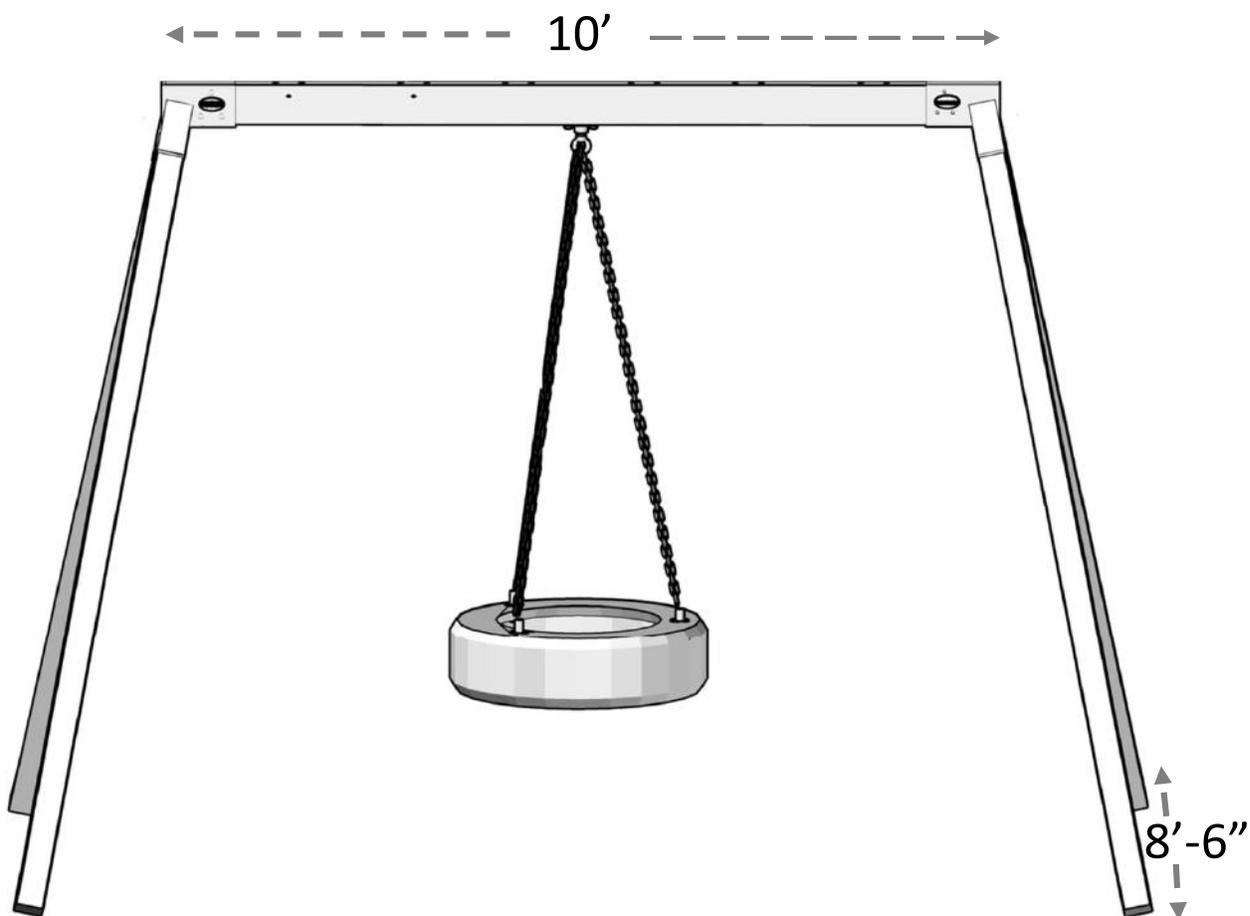



10 year warranty

Eastern Jungle Gym® (“EJG”) warrants all wooden components of its swing sets, under normal use and conditions, for a prorated period of 10 (TEN) years from the date of purchase. The warranty applies to the original purchaser at original address on sales receipt for the Classic, Dreamscape, Dream, Supreme (Oct 2015 and after), Supremescape, Ultimate, Extreme, Sky, Sky Tree House, Fantasy, Fantasy Tree House and Imagination swing sets. It warrants against structural failure from insect infestation or wood rot. It does not cover rot or decay that occurs as a result of installation of a swing set in an area with poor drainage.

Seasonal checks, minor cracking, knots, knot holes, peeling, warping, splintering, etc. are all considered natural characteristics and cosmetic imperfections of any wooden outdoor play equipment. They do not result in structural failure, and they are not covered under this warranty. Discoloration, mold growth and faded stain on the wooden components, as well as surface rust on hardware, are not considered defects and are not covered under the warranty.

Any components returned to EJG under this limited 10-year warranty must be sent freight prepaid and will be replaced or repaired at Eastern Jungle Gym’s option. Returned components will be sent freight collect. Eastern Jungle Gym® reserves the right to examine photographs and/or physical evidence of merchandise claimed to be defective and to recover merchandise prior to any warranty claims. Any other cost associated with the work that must be performed on site is not covered. Any travel and labor or shipping and handling expenses will be the responsibility of the original purchaser. The warranty described thus far is the original purchaser’s sole and exclusive remedy. It lasts for 10 years, or until the original customer sells or otherwise transfers the unit.

In addition to and separate from the above, all chains, rope, canopy tent tops, seats, hardware, metal braces, handles, rungs and all accessories will be free from defects in material and workmanship for a period of 1 (ONE) year from the date of purchase. Cracks in plastic components, as well as chips and imperfections in the powder-coated finishes, are not considered defects in workmanship or material if they do not affect the functionality of the component or the swing set, and as such will not be covered under this warranty. Any components returned to EJG under this limited one-year warranty will be replaced or repaired at Eastern Jungle Gym’s option. Any cost associated with work that must be performed on-site is not covered, and neither are travel and labor or shipping and handling expenses. Those will be the responsibility of the original purchaser. The warranty described in this paragraph is the original purchaser’s sole and exclusive remedy. It lasts for 1 year or until the original customer sells or otherwise transfers the unit.

Non-residential use of swing set or any swing set parts (including but not limited to chains, ropes, canopy tent tops, handles, etc.) is prohibited and will not be covered under any warranty, as Eastern Jungle Gym swing sets are designed for residential use ONLY. EJG reserves the right to examine photographs and/or physical evidence of merchandise claimed to be defective, and to recover merchandise prior to any warranty claims. Any merchandise returned for inspection must be sent freight prepaid, and will be returned freight collect, unless return authorization number is issued.

These warranties do not apply to any swing set or swing set part that has been subjected to abuse, vandalism, improper installation, negligence or acts of God. Warranties are void if any alterations or additions have been made to the swing set, or if it has been relocated by the customer or a third party.

These warranties are subject to the limitations stated herein. These warranties are expressly in lieu of all other warranties. They exclude all consequential damages. Some states do not allow the limitation or exclusion of consequential damages, so the above may not apply to you. Eastern Jungle Gym® does not authorize any individual or representative to express or imply any other warranty.

Notice: Failure to maintain your equipment properly may cause the warranties described herein not to apply in certain circumstances. It is the owner’s responsibility to maintain the swing set, which includes but is not limited to hardware inspection and annual staining or sealing.





Warranty Claim Process

IMPORTANT:

The wooden components in your Eastern Jungle Gym will have imperfections. We would like to remind you that seasonal checking, surface cracks, knots, knot holes are natural characteristics of all wooden swing sets. These imperfections that are not resulting in structural failure are NOT covered under this warranty.

After You have completed building your Eastern Jungle Gym completely and correctly , you may have a warranty claim. Please take the following step to insure a fast claim.

- 1) Write a brief letter describing any issues. With your name address and contact number.
- 2) Attach a copy of your sales receipt or other means of proof of purchase.
- 3) Provide a photo of the part or parts for your warranty claim and a photo of the complete set.

NOTE: Failure to follow these step may result in a delay of your claim.

Mail all information to:

**Customer Service
Eastern Jungle Gym
30 Commerce Dr.
Carmel, NY 10512**

Or email - info@easternjunglegym.com

A Eastern Jungle Gym customer service rep will contact you by phone or email after reviewing the claim approximately 24 - 48 hours. If a part is covered under warranty, you the customer will be responsible for shipping and handling.

Customer Service available 9-5pm EST Mon-Fri call 1-800-752-9787





Commonly Asked Questions

Q: How do I know when hardware (screws, lags) are securely tightened?


A: You know when hardware is tight when the head of bolt washer or screw head are firmly against the wood. If you hear or see splintering this is an indication that you are over tightening your hardware.

Q: What should I do if a piece of hardware lines up with a knot or if the lag bolt should split?

A: There is extra hardware provided with the swing set for this reason. Re-drill a new hole with a 1/8" drill bit in a new direction to miss obstruction.

Q: What if my swing set has cracks on the wood or seems to be developing cracks?

A: Seasonal checks, surface cracks and knot holes are natural characteristics of all wooden swing sets. A check is a separation of the wood fibers running with the grain. This is caused by varying temperatures and moisture conditions. By coating your swing set with a sealant or preservative, will help protect your swing set from this (not stopping it.)

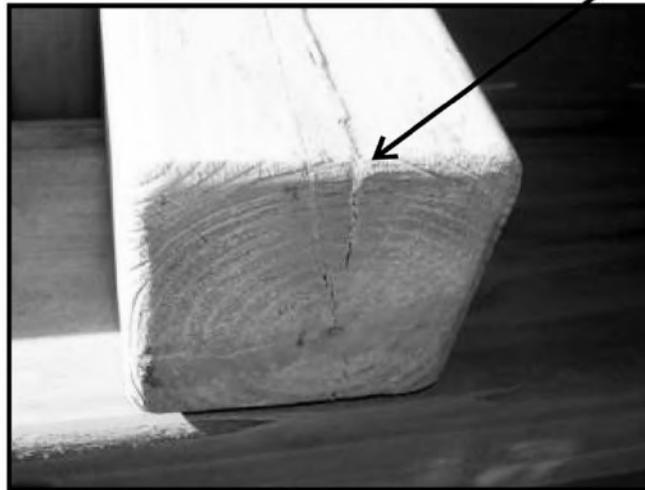

Example of seasonal checking or Surface cracks.



Register Your Eastern Jungle Gym

Remove this page, fill it out and return it to

Eastern Jungle Gym
30 Commerce Dr.
Carmel, NY 10512

Name _____
Address _____
City _____
State _____
Zip Code _____
Phone Number _____

Where Purchased _____
City _____
State _____
Purchase Date _____

Product Satisfaction: ___ Excellent ___ Good ___ Fair ___ Poor
Instruction Satisfaction: ___ Excellent ___ Good ___ Fair ___ Poor
Comments: _____

I have read the owners manual and understand my responsibility to maintain my swing set accordingly and to instruct my children of proper play and safety procedures. I also understand that all children that utilize my play system are to be supervised at all times.

Signature _____ Date _____

Order all your swing set accessories
at www.easternjunglegym.com

